



Changing the Prefilter

Standard Housing:

1. Turn the lever in the cap to the off position. If you have another valve prior to this to shut the water off, you may want to shut that off as well.
2. Make sure to have a bucket under the housing as you will lose some water
3. Take the wrench, slide on from the bottom and turn left to loosen
4. **When you have the container off, in the top there should be an O'Ring, if not it may be stuck in the cap. DO NOT LOSE THIS O'RING.**
5. Empty the water out of the container and clean with water, make sure to also clean where the o'ring sits. You can do this with a corner of a clean rag or paper towel.
6. Gently clean the o'ring making sure you do not stretch it
7. Put a thin film of lubricant on the o'ring using your thumb or forefinger
8. Put the o'ring back in place
9. Put a new filter in the container
10. Take the container and screw it into the cap
11. Only hand tighten, do not use the wrench if you don't have to, so next time it won't be hard to loosen.
12. After everything is put back together, turn the water back on
13. If there is a leak, make sure the o'ring is in place and/or tighten a little more

BB Housing:

1. Turn the water supply off (the ball valves are normally near the housing. It may have a black, red or green handle)
2. Depress the red button on the cap, this lets the air out. If you don't do this, you will not be able to get the container off as it is under pressure
3. Follow the same directions as above for the standard housing

****Any questions...don't hesitate to call!**